



rhea Business Line grande rhea Business Line grande VHO

Installation and Maintenance Manual

Translation of the original instructions – Type: T.TOP 08



Manual Code: MAN2100224EF rev.00

date: February 2025

00	25.02.2025	First issue	Full
rel.	date	description	
this document is made available electronically on the www.rheavendors.com site			



Please print this manual only if necessary, environmental protection is our common interest.

Index

1. General information	6
1.1. Intended use	6
1.2. Copyright information	6
1.3. Storage of the manual	6
1.4. Serial number label	7
1.5. Conformity mark	7
2. General safety instructions	8
2.1. Symbols of danger	8
2.2. Safety standards for maintenance	9
2.3. Residual risks	10
3. General guarantee conditions	11
4. Technical data of the vending machine	12
4.1. Instant product canisters capacity	13
4.2. Tolerance values	13
4.3. Configurations	14
4.4. Accessories	15
5. Installation	16
5.1. Receipt	16
5.2. Handling	16
5.3. Unpacking	16
5.4. Positioning	17
5.5. Electric connection	17
5.6. Hydraulic connection	18
5.7. Water quality	18
6. Description of the vending machine	19
7. Electronics	21
7.1. Connection diagram for espresso and Instant machines	21
7.2. CPU/ Power board	22
7.2.1. Power board and Carrier board for pressure boiler and instant	22
7.3. Display board	23
7.3.1. Display board touch panel	23
8. Water heating	24
9. Hydraulic installation and diagrams	25
10. First installation of the machine	28
10.1. Cleaning and sanitising the vending machine and its parts in contact with foodstuffs	28
10.2. Cleaning and sanitising internal components	28
10.3. Start up	29
11. Machine setup mode	29
11.1. Setup mode	29
12. Clean/rinse cycle	31
12.1. First rinsing	31
12.2. Coffee brewer clean/rinse cycle (Espresso versions)	33
13. First installation procedure	34
14. Vending machine loading	35

14.1. Loading instant products and coffee beans (when the machine is off).	35
15. Programming	35
16. Maintenance	36
16.1. Weekly	36
16.2. Monthly	37
16.3. Yearly	38
17. Uninstallation	39
18. Solution of Problems (major OFF List)	40
19. Suspension of the service (temporary inactivity)	42
20. Out of service	42
20.1. Temporary out of service	42
20.2. Definitive out of service	42

1. General information

1.1. Intended use



This machine is intended for professional use only, the correct operation of the vending machine occurs indoors under normal environmental conditions and at a room temperature between 5 °C and 35 °C, the relative humidity below 80%.

The vending machine is intended to dispense prepared drinks only, by mixing food products with water (espresso coffee by infusion) to use food products declared by the manufacturer suitable for vending in open canisters, any other use is improper and it may cause accidents. Dispensed drinks shall be consumed immediately and in no case preserved for later consumption; however, it is recommended to use products specific for vending machines only.



Never use the machine for purposes other than its intended use; it is absolutely forbidden to make any technical change.

All the instructions on how to maintain, clean and sanitise the vending machine shall be strictly observed and followed by the operator who shall pay great attention to treatment, preservation and replacement of the products as scheduled and make sure that they perfectly comply with the standards for preserving and dispensing foodstuffs.



Due to the large variety of available options and the constant technical update of our vending machines, some special device or function might be indicated and described not in the manner you expect.

1.2. Copyright information

This document contains some confidential information of Rheavendors Industries S.p.A.'s exclusive property. The content of this document can be neither disclosed in favour of third parties, nor copied or reproduced in any form whatsoever, either fully or partially, without Rheavendors Industries S.p.A.'s prior authorisation in writing.

The utilisation, reproduction or disclosure of the technical information in this document can be protected by Rheavendors Industries S.p.A. according to the Law.

Rheavendors Industries S.p.A. reserves the right to improve future production without serving any prior notice and without assuming any obligation to update the products on the market.

The manufacturer will disclaim all responsibility for any inaccuracy due to misprints.

1.3. Storage of the manual

This user manual forms an integral part of the machine and it shall be kept intact and at the user's disposal for the whole life cycle of the machine.



This manual is intended for the installer and the maintenance technician, it shall be kept carefully and accompany the vending machine at each property transfer during its life.


For a better storage handle it carefully, with clean hands and never place it on dirty surfaces. No part shall be removed, torn or arbitrarily modified, the manual is to be filed in an environment protected against humidity and heat and in the proximity of the machine of reference.



A copy of this manual and the complete manual may be requested from the contact details of the following point.

1.4. Serial number label

Silver serial number labels are applied inside and outside the cabinet of the vending machine, they supply the following information:

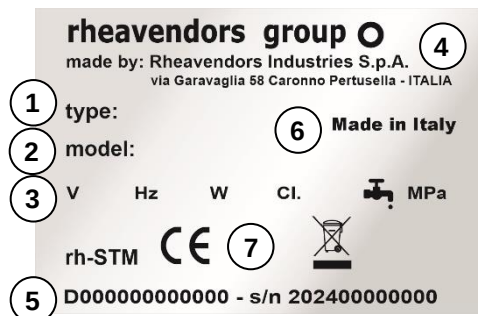

1	Type of the machine
2	Model of the vending machine and configuration
3	Rating plate with power supply voltage and hydraulic supply
4	Manufacturer
5	Vending machine code - production date and serial number
6	Country of manufacture
7	Certifications

For a quick identification of the vending machine and for the best support please supply the data on the serial number label and make them known.



Rheavendors Industries S.p.A. is ready to supply support and information on this vending machine;

telephone: +39 02 966551

e mail: rheavendors@rheavendors.com

for the references of our partners all over the world visit the site: www.rheavendors.com

1.5. Conformity mark



DECLARATION OF CONFORMITY

Rheavendors Industries S.p.A. declares that this drink vending machine has been designed and manufactured in compliance with the following directives and regulations:

DIRECTIVES : 2014/30/EU, 2006/42/EC, 2012/19/EU, 2011/65/EC, (EU)2015/863, 2014/53/EU*

REGULATIONS : 1907/2006/EC, 1935/2004/EC

MANUFACTURER : Rheavendors Industries S.p.A. - Via Valleggio, 14 - 22100 Como (CO) – Italy

(*) The machine could be equipped with radio modules approved by Rheavendors Industries SpA; on the label, some letters identify the type of radio technologies (as shown below)

w	r	m	L
Wi-Fi	RFID	GSM module	LTE module

The radio parameters are:

Wi-Fi : 2402-2480 MHz, max power 20 dBm

RFID : 13.56MHz, radiated H-field (maximum field strength) H-field @ 10m =-31.5 dBμA/m

GSM module : 33 dBm 900 MHz; 30 dBm 1800 MHz.

LTE module : LTE-FDD: B1/ B3/B7/B20: Class 3 (23 dBm ±2 dB)

WCDMA: B1/B8: Class 3 (24 dBm +1/-3 dB)

GSM: B8 (900 MHz) Class 4 (33 dBm ±2 dB) and B3 (1800MHz) Class 1 (30 dBm ±2 dB)

2. General safety instructions

2.1. Symbols of danger

Before using the machine, carefully read this information that helps you behave properly and guarantees a safe use; the following pages use the symbols listed here below, whose meaning is of attention:

**GENERAL**

if the text is highlighted by this symbol, it is recommended to pay special attention to the performance of the procedures described; if not carefully performed on safe conditions, they can be source of general danger.

**HIGH VOLTAGE**

if not properly performed, the actions marked by this symbol may expose to accidental contacts with live parts.

**DANGEROUS TEMPERATURE**

if not properly performed, the actions marked by this symbol may expose to accidental contacts with high-temperature parts.

**MOVING PARTS**

if not properly performed, the actions marked by this symbol may expose to accidental contacts with moving parts.

**CRUSHING**

if not properly carried out, the actions marked by this symbol may expose to a risk of crushing.

The same symbols are placed inside the vending machine to indicate the parts on which to act with the utmost caution.

**SERVICE KEY IN USE**

the symbol recommends the utmost attention during the actions described; the use of the service key activating all machine functions when the door is open is only reserved to the technical operators who know the operation of the vending machine, who are aware of its potential risks and who make sure they are operating on totally safe conditions; the use of the service key shall be strictly limited to the time necessary to perform the actions requiring the use thereof; users shall be informed of the prohibition on using and approaching the vending machine.

**WEIGHT**

the symbol reminds the user to consider the machine weight carefully for handling and placing it definitively.

**WATER SUPPLY**

it marks the parts duly requiring caution in case of leakage, if connected with the hydraulic network.

**SUPPORT SURFACE**

it reminds the user to install the machine on a support surface, the max. inclination of which is 2°.

2.2. Safety standards for maintenance



The machine shall be installed according to the laws in force in the Country of operation; pay special attention to the rules about the machines directly connected with the hydraulic network.

Pay special attention to the chapters and notes highlighted by the symbols of alert and strictly observe the rules concerning the technicians', operators', and users' safety.

The vending machine may be used by children who are at least 8 years old and by people having reduced physical, sensory or mental capacities or not having all necessary experience and knowledge, provided that they are supervised or instructed on how to use the machine safely and they have well understood the dangers related thereto; children must be supervised and prevented from playing with the vending machine. Cleaning and servicing should not be performed by children unless they are supervised by someone.

Should you find out a water leak, the presence of smoke, ... immediately detach the vending machine from the electric and hydraulic network, never try to restore its operation and apply to skilled technicians.

The inclination of the support surface of the vending machine shall not exceed 2°.

The normal operation conditions of the vending machine shall be:
Temperature: 5 °C ÷ 35 °C and maximum relative humidity: 80 %

If the hydraulic connection tube is not supplied with the machine or in case of replacement, the connection must be carried out only with a set of mobile joints (old ones shall never be reused), whose material is type-approved for food use according to the laws in force in the Country of operation and capable of supporting the operating pressure of the hydraulic network, in compliance with IEC/EN 61770.

The user is forbidden to approach the vending machine during maintenance and service operations. The area where to carry out maintenance and service operations shall be properly signalled.

Never remove protections, never override safety devices and never modify the machine or its components.

The vending machine is not suitable for installation in environments where you use water jets for cleaning (e.g. large kitchens, canteens) or steam jets or sparks (e.g. machine shops).

For cleaning at regular intervals refer to the chapter about maintenance.

2.3. Residual risks



A residual risk is understood as a potential danger that cannot be eliminated and persists despite all precautions in use since it is related to the intrinsic features of the product, and it also includes non-identifiable risks.

The actions and behaviours listed here below are intended to reduce residual risks and you shall always adopt them when interacting with the machine.



Wear clothes that can properly avoid any accident (never wear rings, chains, clothes with laces or excessively long sleeves, ...).



Carefully evaluate the treatment of residues from installation (wood, plastics, ...) and utilisation (product powder, bags, ...).



Never repair or carry out any technical action if you have not been properly trained.



Signal that a technical action is in progress on the machine (barriers against approach, signs, ...), carry it out quickly without leaving the station.



Install the machine in a sheltered, illuminated and well-ventilated environment; keep it clean and never place tools or any other object on it; never install it outdoors or, anyway, never expose it to atmospheric agents.



Make sure it can be neither reached by water sprays, vapours or sparks nor hit by objects that might damage it.



Carefully consider the machine weight and stability during the installation and in the final working position.



Supply the machine within voltage, temperature, pressure and water limits and provide for an effective earthing.



Even if detached from supplies, the machine may contain pressurised hot water at a high temperature.



Never detach hydraulic and electric supplies when they are active and/or the vending machine is in use.

3. General guarantee conditions

These conditions regulate Rheavendors Industries S.p.A.'s obligations with reference to guarantee and repair; any other term or condition, either verbal or written, is not applicable, including those in the purchaser's purchase orders, if not explicitly accepted and signed by Rheavendors Industries S.p.A.; if the guarantee terms here below should be held not to be valid and/or lawful in the Country where the product is sold, they will not be effective whereas all the other clauses will remain valid and applicable.

The mechanical and electronic components of the machine are guaranteed for twelve months, starting from the sales date certified by the fiscal receipt.

The guarantee shall be understood as the replacement of any part of the machine that – at the manufacturer's unquestionable discretion – should prove to be originally defective due to manufacturing defects; the cost of sending the manufacturer machines, defective pieces and spare parts will be totally charged to the user's account; the manufacturer reserves the right to use new or reconditioned components for repair; if replaced, original components will be guaranteed for 12 months; the parts replaced under guarantee will become Rheavendors Industries S.p.A.'s property (request "Form Materials under guarantee – Authorisation to return").

In case of irreparable failure or if a failure of the same origin is repeated, the manufacturer may – at its unquestionable discretion – replace the machine with another one, the model of which is either the same or an equivalent one; the guarantee of the new machine will be extended up to the original term of guarantee of the replaced machine.

All the parts that should prove to be defective due to negligence or carelessness (non-observance of the instructions for the operation of the machine), incorrect installation or maintenance by unauthorised personnel, transport damage or any circumstance – anyway – not due to the manufacturing defects of the machine are not covered by guarantee; the installation and connection with supply plants as well as the maintenance operations mentioned by the installation manual are also excluded from any performance under guarantee; moreover, the guarantee will not cover payment systems either; whether installed on the machine or supplied as an accessory, they are subject to their manufacturer's guarantee whereas Rheavendors Industries S.p.A. will just act as a broker.

All changes made to the machine and not agreed with the manufacturer in writing will involve the immediate termination of the guarantee period and anyway fall under the Customer's total responsibility.

The guarantee is excluded in all cases of improper use of the machine.

Rheavendors Industries S.p.A. will disclaim all responsibility for any damage that may be directly or indirectly caused to people, animals or things as a result of:

improper use of the vending machine; incorrect installation; improper energy or water supply; serious maintenance deficiency; actions or changes not explicitly authorised; use of non original spare parts.

In case of failure, Rheavendors Industries S.p.A. is obliged neither to compensate any economic damage due to a forced stop of the machine nor to extend the guarantee period.

If the machine should be transferred to a centre designated by the manufacturer for overhaul or repair, the relative transportation risks and costs will be charged to the user's account; the freight charges of machines, defective pieces and spare parts are always understood as charged to the user's account.

4. Technical data of the vending machine

DIMENSIONS

	grande	grande VHO
Height	591 mm	666 mm
Width	422 mm	422 mm
Depth	599 mm	599 mm
Depth with front door opened	880 mm	880 mm

NET WEIGHT

espresso machine	33 kg
espresso VHO machine	34 kg

SUPPLIES

Hydraulic	water inlet with 3/4" Male Gas-fittings
Hydraulic pressure range	from 0.1 to 1 MPa
Electrical voltage	220-240 Vac, 50 - 60 Hz o 120 Vac, 60 Hz single-phase and ground
Power	from 1,400 W to 2,000 W
Cable of type	H05VV-F 3G 1,5 mm ² (230 V); SJTO 3x16AWG (120 V)

* values and indications for the standard machine

anyway refer to the data supplied by the serial number label

SOUND PRESSURE

A-weighted equivalent continuous sound level	less than 70 dB (A) measured at 1 meter from the surface of the machinesy and at a height of 1.6 meters from the floor
--	--

WATER AND ENERGY SUPPLY TOLERANCES / ENVIROMENT TOLERANCES

Water total hardness	from 10°f to 25°f
Water recommended conductivity	400 µS @ 20°C
Nominal voltage	+10% / -15%
Temperature	from 5°C to 35°C
Relative humidity	maximum 80%

MACHINE SAFETY DEVICES

Hydraulic:	Water solenoid valve with antiflood sensor
Electric door:	Door interlock microswitch
Electric fuses 6.3x32mm:	12 A delayed – 230 Vac
Electric fuses 6.3x32mm:	16 A fast – 120 Vac
Thermal Klixon on heating devices:	Safety thermostat manually resettable
Vibration pump:	Thermal protector equipped

GRINDER

Conical millstones motor:	230 Vdc or 120 Vdc
---------------------------	--------------------

VARIFLEX ESPRESSO COFFEE BREWER

	Ø36 mm.	Ø45 mm.
ground capacity:	6 ÷ 9 g	8 ÷ 14 g
Motor:		30 W – 24 Vdc

WATER PUMPS

Instant machine:	24 Vdc
Espresso machine:	230 Vac or 120 Vac

4.1. Instant product canisters capacity

In according to the machine configuration, product canisters with mixer gear and product shaker, if arranged by the configuration and with standard or shorter product chute outlet:

Coffee beans 1 Kg or 2 Kg VHO		
Height:	instant canisters 199 mm	
Width:	55 mm	112 mm
Volume:	1.5 litres	3.2 litres

The tests carried out by Rheavendors use instant products and coffee beans suitable for vending purposes.



Rheavendors Industries S.p.A. is ready to supply support and information to carry out operation tests by using products having different characteristics.



Machines and components have been tested with standard products; if you plan to use specific non-conventional products our customer service is available for preventive testing that may also affect the choice of some machine components.

USE SPECIFIC PRODUCTS FOR VENDING MACHINES ONLY. The functionality and reliability of the machine might be influenced by external factors not complying with the standard operation conditions of vending equipment.

4.2. Tolerance values

Because of the standard industrial average tolerance values of various components of the machine, such as spirals, motors, gears, millstones, etc., and because of variable parameters, such as ambient temperature, relative humidity and ageing, that may act on products, dosage may vary all over the time and from one machine to the other one; this aspect must be carefully considered, above all in view of operations, such as the cloning of the configuration of recipes, the change of components and products, telemetry and other mathematical calculations depending upon weights.

4.3. Configurations

Possible configurations are numerous and they are coded by categories exemplified here below in the abbreviation of the machine:


espresso	instant products and coffee beans	E
instant	instant products only	I
product canisters	number of instant products and coffee beans	E4
water supply	external, by means of the inlet solenoid valve	E3 R
mixer number	mixer number	E3 R2





The product canisters, mixing bowls and mixers are numbered progressively from the left to the right, this numbering is used for programming drinks.

Configuration examples:

Various possible configurations examples for coffee beans canisters are represented here below, the operation principles are any way universal and applicable to all machines:

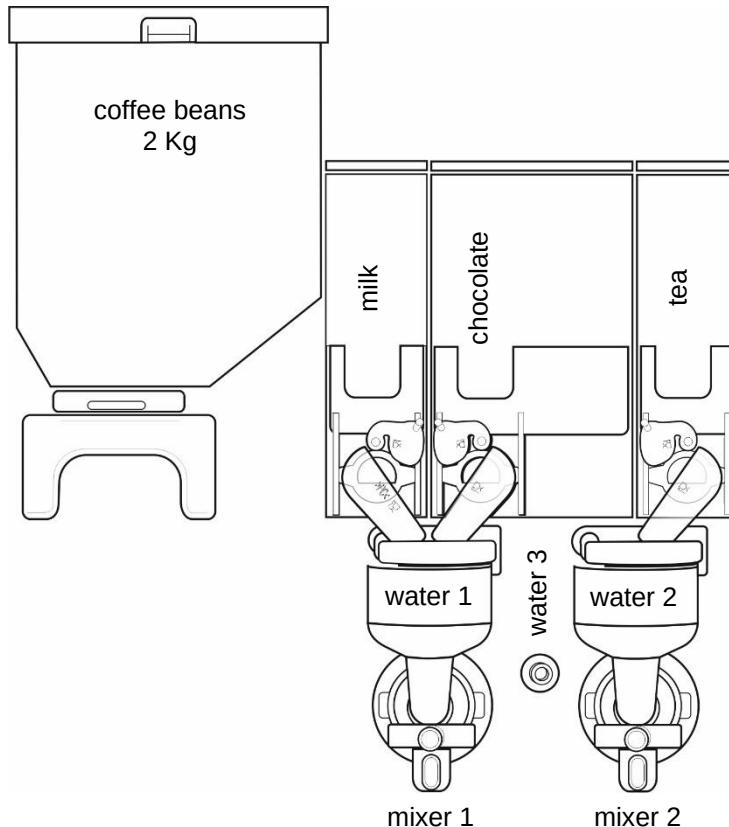

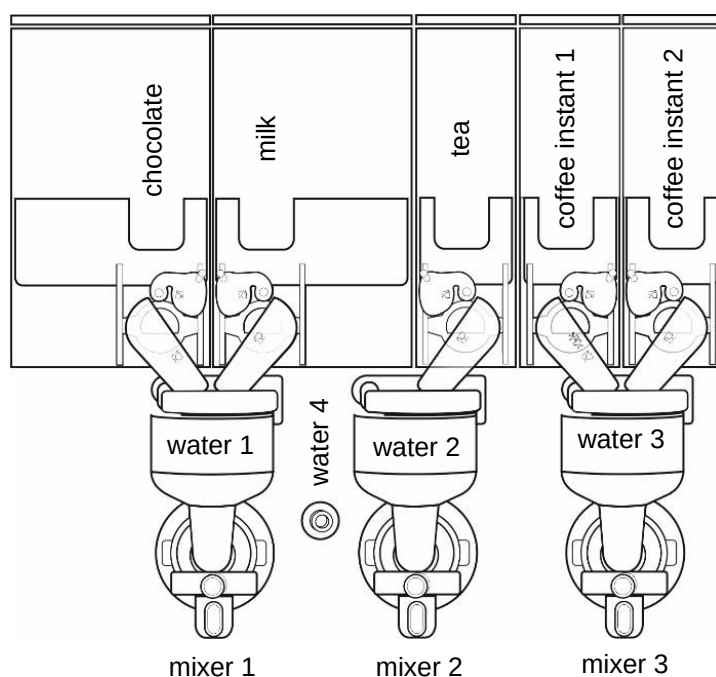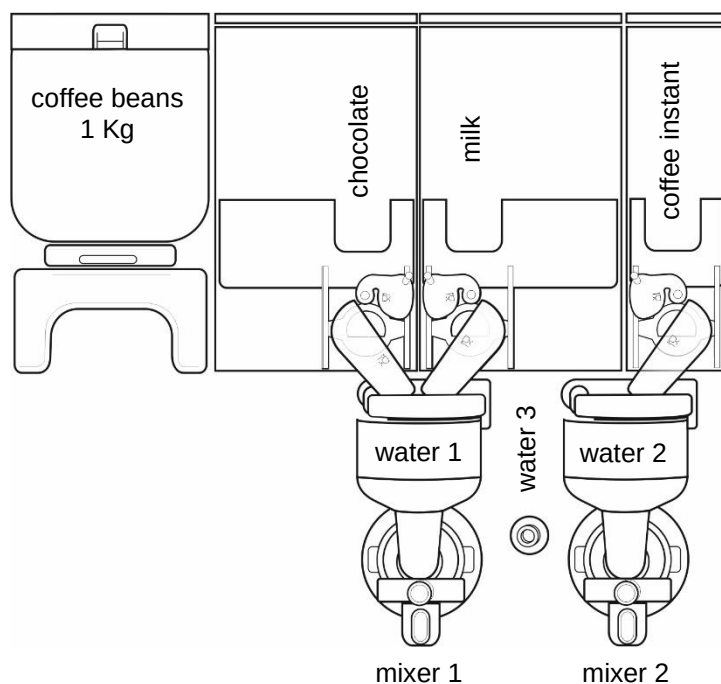

4.4. Accessories



To complete and supplement the vending machines of the range, Rheavendors has got a series of accessories manufactured for these machines, such as cabinets, autonomous water supply kits, anti-limestone filters, connection with machines dispensing cold drinks and water modules.

Rheavendors Industries S.p.A. is at disposal for any kind of support and information on special configurations.

5. Installation

5.1. Receipt

Upon receipt of the vending machine make sure that it has not been damaged during transport.

If you should find out any damage, immediately make a complaint to the carrier: the package shall be intact, it shall show no sign of alteration, dent, impact, deformation, breakage, wetted area or sign that may indicate that the package has been exposed to rain, frost or heat.



Never connect the vending machine hydraulically and/or electrically if the package has been damaged during transport and /or in case of missing visible parts.

5.2. Handling

The vending machine shall be transported, handled and positioned by skilled and trained personnel; **never overturn the machine while transporting it and never forget to observe the orientation arrows on the package**; never lift the vending machine with ropes, never drag it, never lay down the vending machine for transport and avoid any shock.



Two operators provided with personal protective equipment (accident-prevention shoes, gloves ...) are required for handling; the vending machines weigh abt. 35kg.

Handle the machine carefully to prevent any accident to the personnel in charge.



For handling use a lift truck or a manual transpallet for supporting its weight and handling it at a lower speed to avoid dangerous overturning or swaying motions.

The manufacturing company is not liable for any damage caused by the total or partial non-observance of the a.m. warnings.

5.3. Unpacking

Put the packed vending machine close to its working position, remove the vending machine from its package, lift the vending machine and arrange it on the working surface.

Use the key placed in the dispensing compartment to open the door of the vending machine and remove the adhesive tape and the polystyrene from the internal components (product canisters...).



The materials forming the package shall be left out of the reach of unauthorised personnel, in particular of children, since they represent a potential source of danger.



The disposal of package components may be carried out by specialised companies only.

5.4. Positioning


When installed in its workplace, the vending machine shall be positioned in a room protected against atmospheric agents: it is not suitable for installation outdoors.

It shall be installed in dry rooms at a temperature between 5 °C and 35 °C and it can't be installed in environments where you use water jets for cleaning (e.g. large kitchens, canteens) or steam jets or sparks (e.g. machine shops).

The switch, the socket and the relative plug shall be easily accessible, make sure that the wall socket is suitable for the type and length of the vending machine cable.

Use the cable supplied with the vending machine for connection with the electric network; the machine shall be placed close to a wall so that the rear panel and the external perimeter are min. 130 mm far from the walls for regular ventilation.

The vending machine shall in no case be covered with cloths or structures.

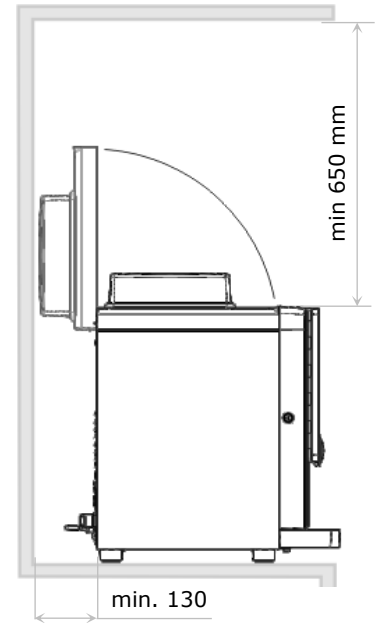

Make sure that the floor can support the weight of the machine, that the machine is placed on a levelled surface by adjusting its feet so that the inclination of the cabinet will not exceed 2° and that the vending machine is perfectly stable.

5.5. Electric connection

The machine is arranged for electric operation at a single-phase voltage of 220-240 Vac or 120 Vac and it is protected by fuses.



Make sure beforehand that the power supply installation can supply the power required by the machine and strictly refer to the rating plate of the vending machine on the serial number label.



Observe the laws on connections with the electric network in force in the Country of operation, make sure that the power supply cable is neither crashed, nor bent, damaged by any sharp edge or subject to any mechanical load.

The electric safety of the vending machine is ensured only when it is properly connected with an effective earthing system; professionally qualified personnel shall check this fundamental safety requirement, the intactness of the machine and its compliance with the standards at least once a year.



It is mandatory to install a residual current device operating at less than 30 mA to detaching the machine from the mains and promptly tripping in case of improper electric input to considerably decrease the risks from any short-circuit. Connect the machine without using reductions, adapters, multiple sockets or extensions; use the cable supplied with the vending machine for connection with the network only.

If damaged, the power supply cable shall be replaced by the manufacturer or its customer care service or, anyway, by a person similarly qualified so as to prevent any risk by using only cables of the type: H05VV-F 3G 1.5 mm² in cross-section (230 V) or SJTO 3x16AWG (120 V).

5.6. Hydraulic connection



Observe the laws on connections with the hydraulic network in force in the Country of operation.

The water used to supply the vending machine must have all the features suitable for human consumption, let water come out of the hydraulic network until it is clear and free of any trace of dirt.

Make sure that the pressure of the network is the one required for the machine and use a pump or a reducer in case of non-compliance; it is recommended to install a tap detaching the machine from the hydraulic network.

The connection shall be carried out by means of a new tube only, type-approved for food use.



The water inlet solenoid valve is provided with an antiflood device mechanically locking the water inlet because of a malfunction of the solenoid valve or the components intended to control the water level in hydraulic circuit.

To restore normal operation, act as follows:

- power off the machine;
- discharge water from the overflow tube;
- close the tap of the hydraulic network outside the machine;
- loosen the joint securing the supply tube of the solenoid valve to discharge the residual network pressure and tighten it again;
- open the tap and power on the machine.

5.7. Water quality

The vending machine shall be supplied with treated or non-treated water, for drinking purposes and suitable for the preparation of food and drinks or for any other home use, supplied through a distribution network and they shall include neither micro-organisms and parasites nor other substances, whose quantities or concentrations may represent a potential danger for human health.

In this regard, the water features shall observe the laws in force in the Country of operation of the vending machine.

Hardness tolerance: from 10°F to 25°F

Water recommended conductivity: 400 µS @ 20°C


6. Description of the vending machine

The vending machine is a machine designed for being used by all users since requiring no specific competence; to obtain the drink, insert the possible credit and press the key you wish for a short time.


Front door panel




Rear door panel

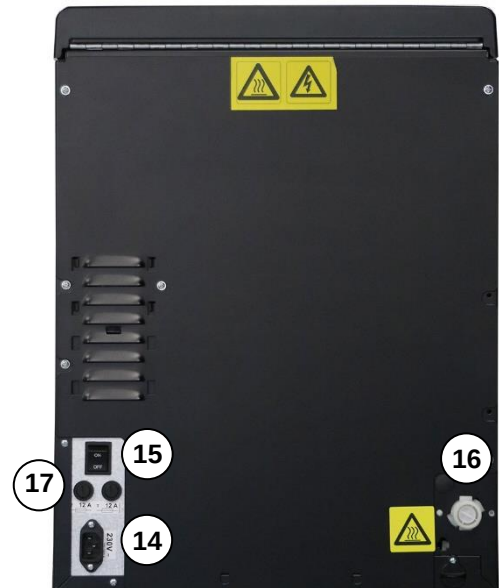

Inner view of the machines (example)

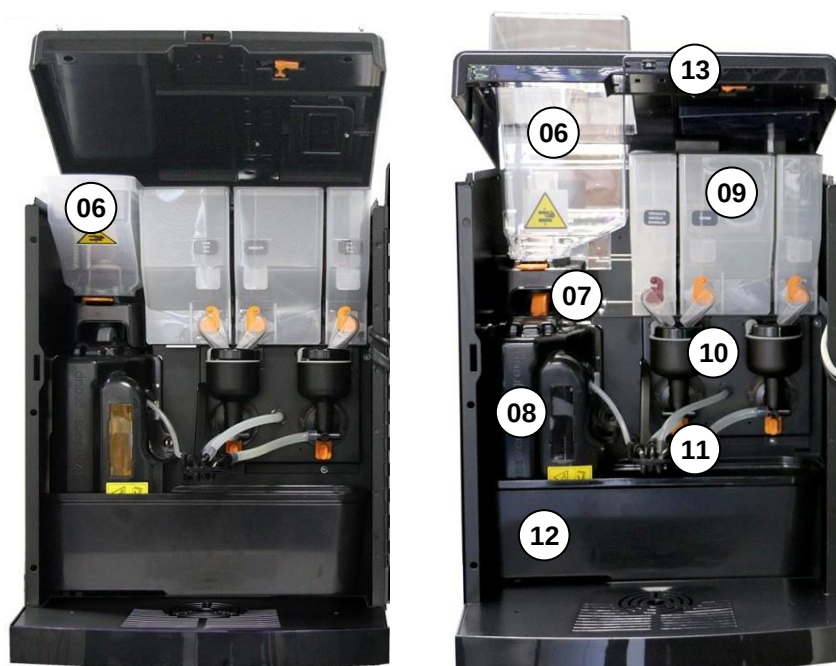

- 01 - Door lock:** the door is closed by means of a lock; the key is mapped and numbered for identification.
- 02 - Selection keyboard:** after closing the door, press the buttons to dispense; the button will turn on during the dispensing cycle; keys assume various functions in the programming mode and enable the user to modify the machine parameters; keys are progressively numbered from the top: 1, 2, ... and from the left.
- 03 - Display:** messages inform users or operators about the operation status of the vending machine.
- 04 - Dispenser:** the vending machine has got a fixed drink dispenser on the cup support surface.
- 05 - Drip tray:** it collects any residual drop from the dispenser and, if necessary, the waste water in excess from the three-way solenoid valve; it is slide-inserted at the bottom of the machine cabinet, in the front, and it is composed by a drawer and a grilled cover that can be washed by running water; an electric contact is intended to control the filling level.
- 06 - Coffee beans canister:** the coffee beans canister (hopper) has got a closing blade for insertion (pull in, insert to the bottom in VHO) before lifting it; the presence of the coffee beans canister is controlled by a micro switch; canisters are closed by a cover to protect products.
- 07 - Grinder:** it grinds coffee beans in the canister to pour it in the coffee brewer chamber; the amount of grounded coffee is determined by programmable software parameter that establish the duration of the grinding; this parameter can also be programmed in quantity to characterize each selection.
- 08 - Coffee brewer:** after receiving the coffee dose from the grinder and compressing it, percolation occurs in the coffee brewer by using the water from the pump; the used dose is conveyed to the chute and the drawer at the base of the machine; the brewer structure is kept at the correct temperature by a hot air heating system that can be programmed via software.
- 09 - Product canisters:** instant product canisters dispense their content into the underlying mixing bowls; an internal worm screw - driven by the product motor - will push the instant foodstuff to the product chute; they can be equipped with a wheel and a shaker for constant dispensing; the outlet, of a standard or smaller size, has got a closing baffle.
- 10 - Mixing bowls:** the mixing bowls of mixers are intended to receive instant products for mixing them with water; the fan of mixer motors acts at the bottom thereof and the drink flows into the dispenser through a silicone tube; the mixing bowls and outlet tubes can be washed with lukewarm running water.
- 11 - Nozzles holder:** a fixed support on the cup station is intended to accommodate the dispensing tubes coming from the coffee brewer, the bowls of mixers and the one of direct hot water.
- 12 - Grounds container:** it collects abt. sixty-five ground doses after having used them in the coffee brewer; a software option shows a warning message as soon as the tray is full; it is complete with a cover intended to prevent humidity from spreading inside the machine as far as possible.
- 13 - Door switch:** it powers off the machine when the door is open.

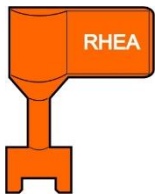**Service key:**

Use the service key to supply the vending machine if it is necessary to activate the machine when the door is open.


Attention some parts remain live any way: act with the utmost caution.

The key is inside the documentation of the vending machine and its use is reserved to the properly trained technical personnel only.

- 14 - Electric connection:** a three-terminal socket is arranged at the back of the cabinet for the connection of the mains cable.
- 15 - Power on switch:** to power on and off the machine.
- 16 - Water inlet solenoid valve:** the water inlet solenoid valve has got an anti-flood safety device intended to stop the water inlet in case of failures; a submersible pump or the **modul on water** can be connected in parallel with its electric terminals.
- 17 - Fuses:** installed on the mains power supply to protect the machine; fuses must be necessarily replaced by specialised technical personnel only.

7. Electronics


7.1. Connection diagram for espresso and Instant machines

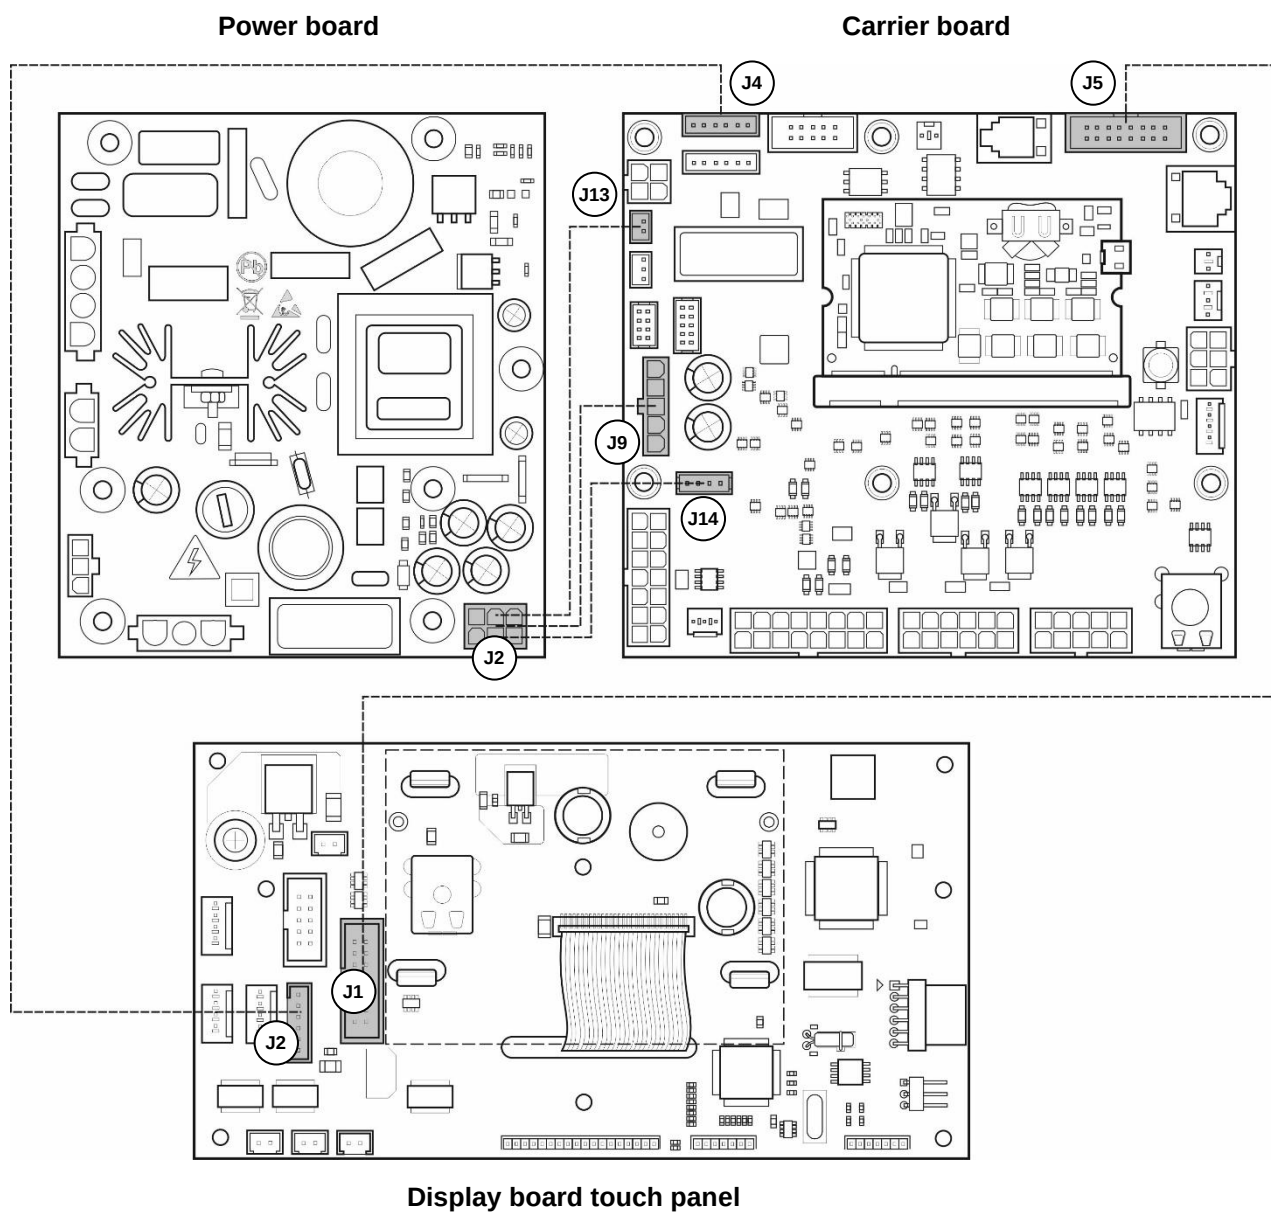

7.2.CPU/ Power board

the power board, housed on the rear of the machine, receives the commands from the CPU, is intended to operate the machine devices; it is intended to give the commands for the devices, such as motors, pumps, solenoid valves or heating elements; a double USB connector provides for the logic connection with other boards and the blinking of the status leds indicates the normal operation thereof.

7.2.1. Power board and Carrier board for pressure boiler and instant

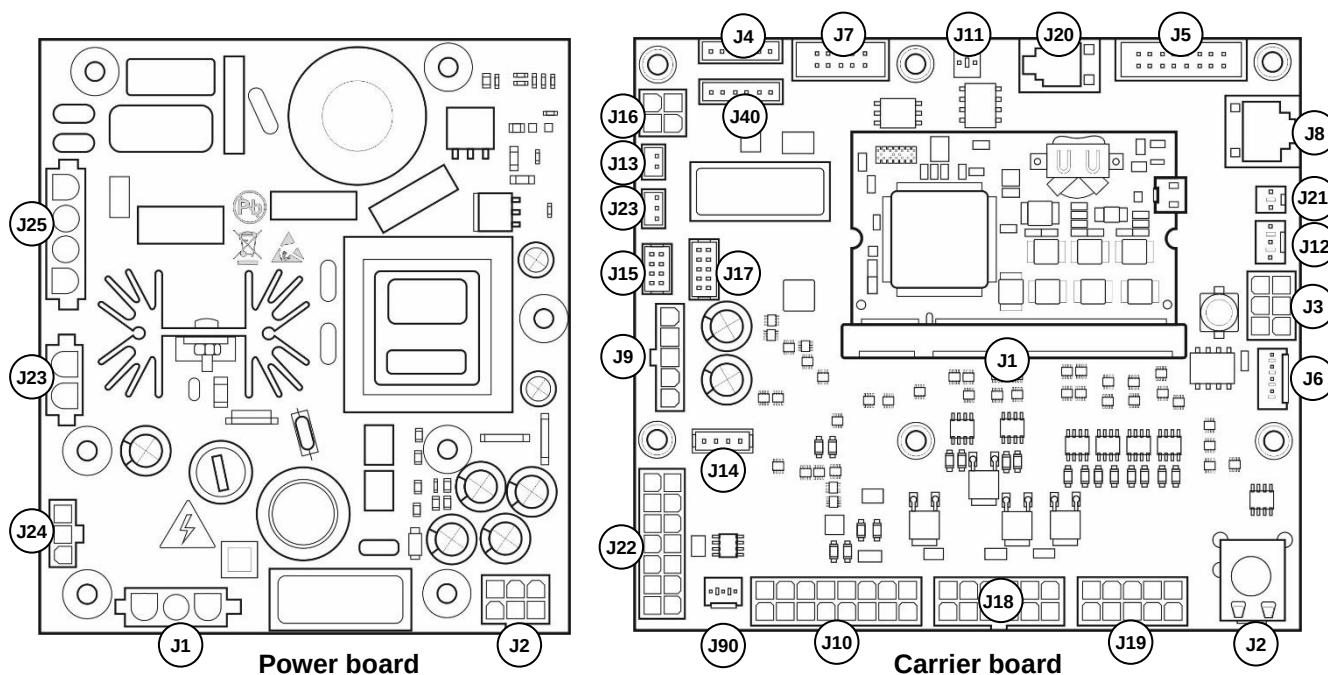

J _	POWER BOARD - Connectors description			
J1	Power supply 230 Vac	J24	Grinder motor 230 Vac	
J2	Power supply npn grinder-boiler-pump SSR	J25	Coffee boiler pump	
J23	Grinder motor 320 Vdc			


J _	CARRIER BOARD - Connectors description			
J1	SOM Board connection	J14	npn - Boiler/Pump SSR	
J2	Double USB-A socket	J15	Gpio-spare	
J3	MDB connector	J16	Power supply 24 Vdc Modem	
J4	Power supply 5/24 Vdc CPU-SMU Interface	J17	I/O	
J5	Signals CPU-SMU Interface	J18	Solenoid valves pumps/mixers	
J6	Executive connector	J19	Product motor	
J7	IN/OUT signals Induction board	J20	RFID connector	
J8	Rheafash black box	J21	NTC Brewer temperature	
J9	Power supply 24 Vdc	J22	IN/OUT signals coffee brewer	
J10	IN/OUT signals (driptray, fans, etc.)	J23	Freevend key	
J11	Boiler level	J40	Power supply 5/24 Vdc Induction board	
J12	NTC Boiler temperature	J90	NTC Air-break water temperature	
J13	npn - Grinder 24 Vdc			

7.3.Display board

the display board, placed inside the door, collects the signals of the selection keyboard and allows the messages visualization through the display, it's connected with the CPU by a flat cable for the signals exchanging.

The inner programming button, it's installed on the printed circuit board; the display board also illuminate the keyboard;


7.3.1. Display board touch panel

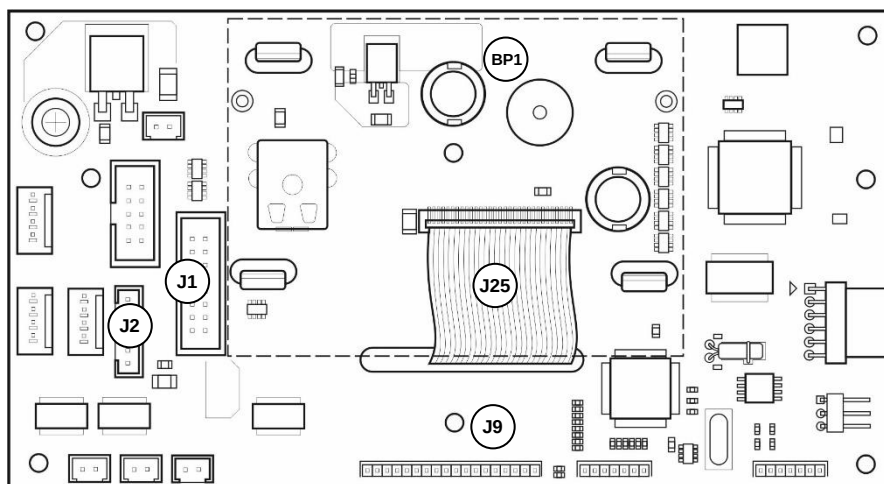

J _ Display board - Connectors description			
J1	Board connector on CPU in J5	J25	Display connector
J2	Board connector on CPU in J4	BP1	"PROG" button
J9	Touch panel keyboard connector		

8. Water heating

Open-top boiler

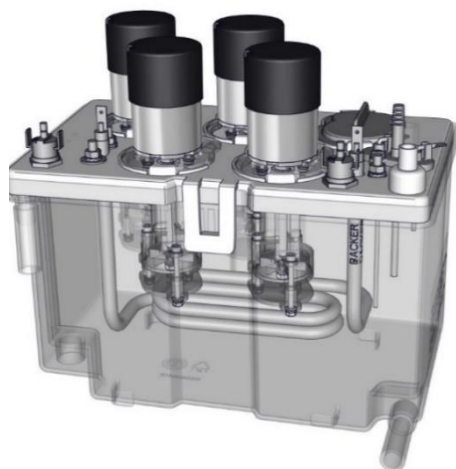

The boiler has all active elements (heating element, heat protections, temperature sensor, pumps) secured to the cover.


Supply pumps have turbines immersed in the boiler water; water is conveyed through tubes intended to supply the mixing bowls; the number of boiler pumps varies according to the machine configuration; a boiler with four pumps is shown here by way of example.



Attention!
these components may be very hot
even if the machine is off.

The water heating system occurs through an electric heating element

Pressure boiler

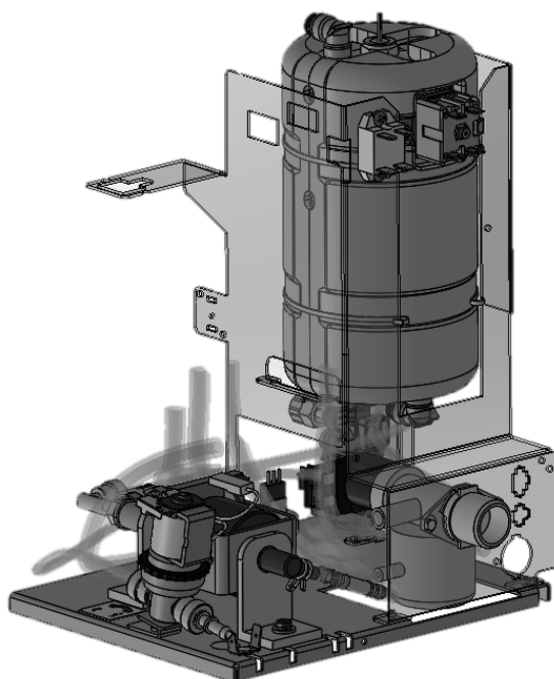

The pressure boiler is available in espresso machines only, a vibration pump with by-pass conveys water through a three-way solenoid valve for espresso and instant products.

The pressure boiler is complete with a temperature probe and a safety thermostat manually resettable. The hydraulic circuit can be emptied through the drain tap.



Attention
these components may be very hot
even if the machine is off.


The water heating system occurs through an electric heating element

9. Hydraulic installation and diagrams


The hydraulic diagrams of the heating configurations available for the vending machine are supplied here below.

The following table describes the meaning of the symbols mentioned by the diagrams

symbol	description
EVA	Water inlet solenoid valve
AB	Air break
CV	Volumetric counter
MP	Vibration pump
BP	By-pass
NR	Non-return valve
CA	Pressure boiler
BO	Open-top boiler
EX	Three-way solenoid valve
E1	Solenoid valve instant 1
E2	Solenoid valve instant 2
E3	Solenoid valve instant 3
GC	Coffee brewer
M1.. M3	Mixer 1 ... Mixer 3
ER	Nozzles holder
VRG	Drip tray
RS	Drain tap
HW	Hot water

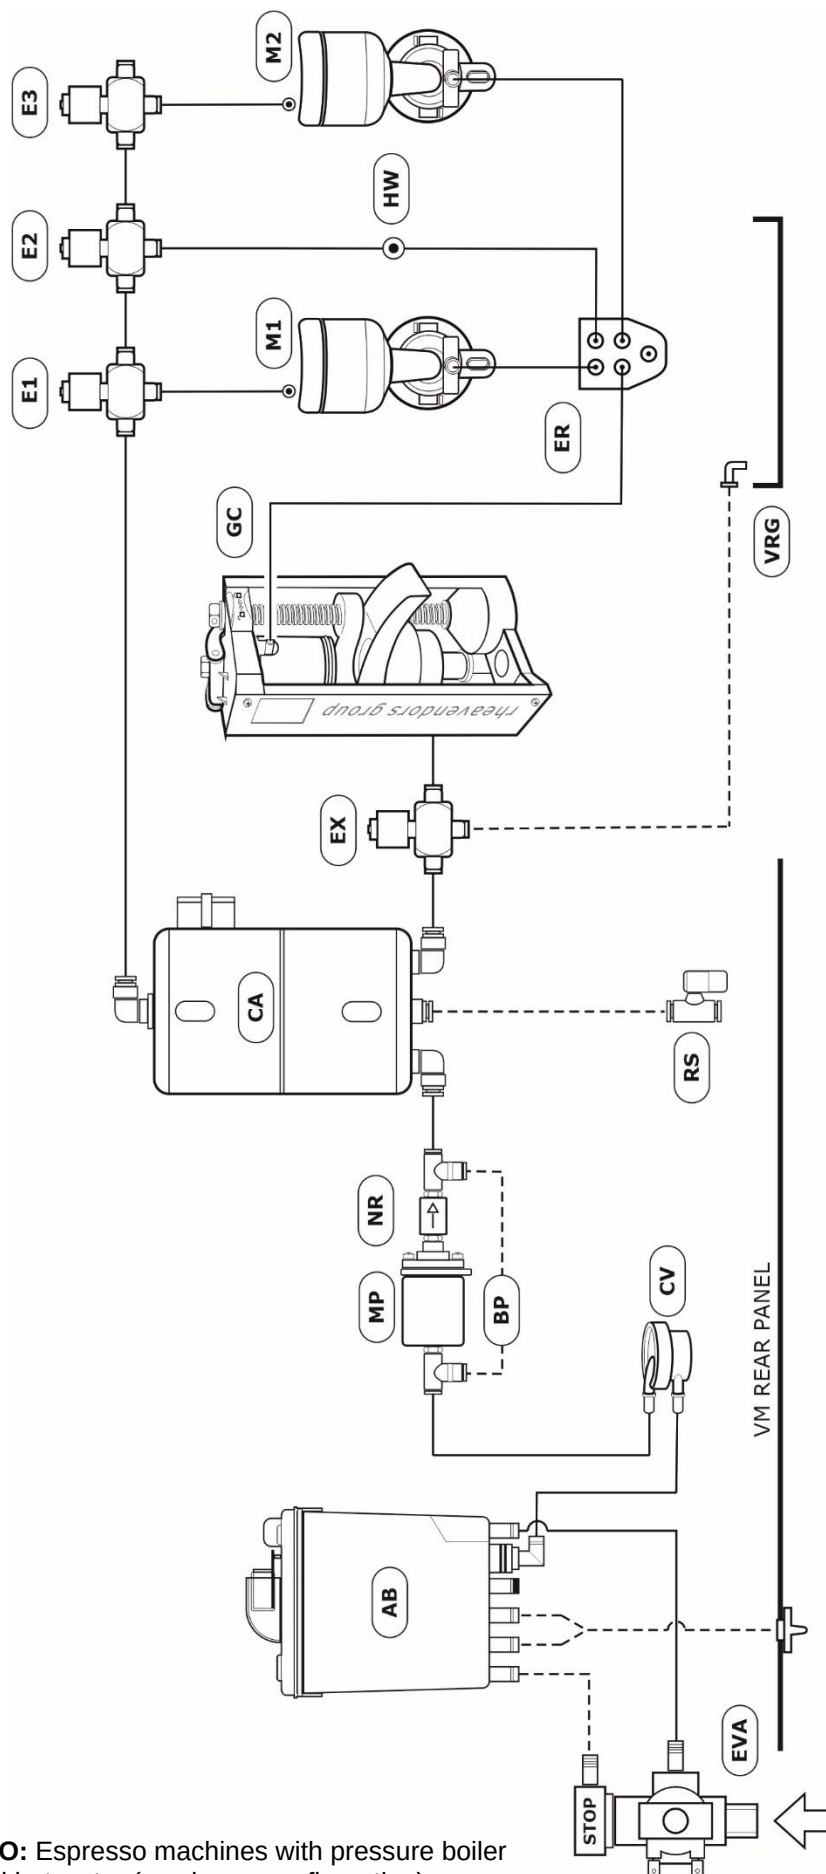

BLine grande/ VHO: Espresso machines with pressure boiler heating system and hot water (maximum configuration)

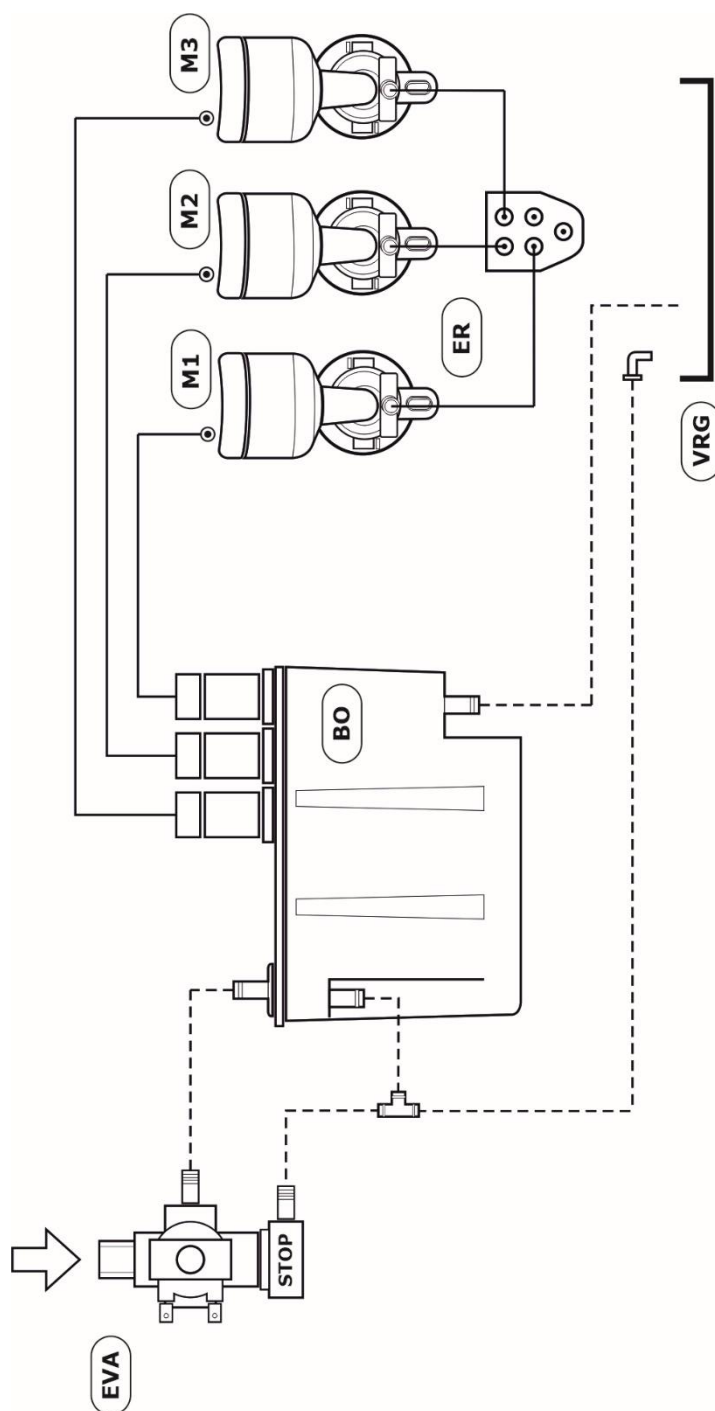

BLine grande/ VHO: Instant machines with boiler heating and hot water (maximum configuration)

10. First installation of the machine



After unpacking the vending machine, placing it firmly at the workstation as well as providing for its water and energy connection, carry out some actions for its functionality.

Wash your hands carefully with water and soap before handling the machine and the products; use drinkable water only to clean the parts thereof.



Please remember that all the actions described below shall be carried out by personnel having a practical knowledge and experience of the machine, as regards safety and hygiene.

10.1. Cleaning and sanitising the vending machine and its parts in contact with foodstuffs

During the first installation of the vending machine and at least every week, according to the use and quality of inlet water, to ensure the hygiene of dispensed products, carefully sanitise powder deposit drawers, mixers and instant drink dispensing conduit as well as dispensing tubes and nozzles; sugar chute, dispensing compartment.



All components must be cleaned with lukewarm running water only (drinkable, maximum 50 °C). The mixers and the instant canisters can be washed in a dishwasher by setting a short clean cycle and a temperature below 50°C.

Use sanitising products also to clean the surfaces not directly in contact with the foodstuffs, pay attention not to clean the machine by means of water jets.

Some parts of the machine may be damaged by aggressive detergents.

The manufacturer disclaims all responsibility for any damage caused by the non-observance of the above or by the use of aggressive or toxic chemical agents.

10.2. Cleaning and sanitising internal components



Prepare a chlorine-based anti-bacterial sanitising solution by observing the instructions supplied with the product; after disassembling and removing, put the product canisters, the mixing bowls of mixers, their fans and the silicone tubes for dispensing products into the solution; the time necessary to sanitise is specified by the anti-bacterial product package; at the end, remove all the parts you have sanitised from the solution, dry them carefully by using clean cloths and reassemble them into the machine; rotate the baffles of the product chutes of instant canisters to close them and fill the canisters with the products by making reference to the machine configuration and to the canister labels; fill in the coffee hopper with coffee beans; close the canisters and the coffee hopper with their upper covers; rotate the baffles of the product chutes to open them; insert to the bottom in the blade intended to open the coffee hopper.

To clean and treat foodstuffs properly, refer to the web site:

<http://eur-lex.europa.eu/> searching for the regulation 2004/852/EC

dated 29/04/2004 (CELEX number: 32004R0852)

In the end, lower down the cover and close the door by means of the lock key and place it in a safe place.

10.3. Start up

As soon as the machine is powered on for the first time, all circuits must be filled in before any other action, and the vending machine performs a diagnostic cycle for loading water and properly placing the coffee brewer; some warning messages appear on the display for the progress of these phases.



- * Vending Machine (VM) will restart, the water in the open-top boiler starts heating to achieve the temperature set-point and then it will be fully functional.

For more details, please refer to the specific programming manual “**Software User Manual**”.

11. Machine setup mode


11.1. Setup mode

How to access it:

This menu gives access to all the machine programming functions; each function allows configuring specific machine parameters or performing specific procedures.




Open the door, lift the cover, power on the main switch of the machine; **insert and rotate the service key into the door switch.**

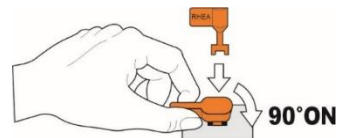

- open the machine door and press the **PROG** button.
- the machine exits the dispensing mode.
- the setup screen is displayed.

Setup screen:

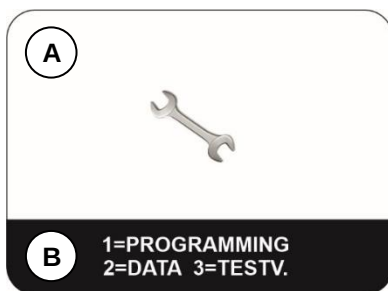

- A - Menu graphics.
- B - Current programming function, parameter or action to perform.




How to exit the setup mode:

Open the machine door and press the **PROG** button: the machine goes back to the dispensing mode.

Panel description

This description can be taken as a reference to identify the buttons mentioned in the procedures in this manual.

Note: The machine image is for illustrative purposes only.

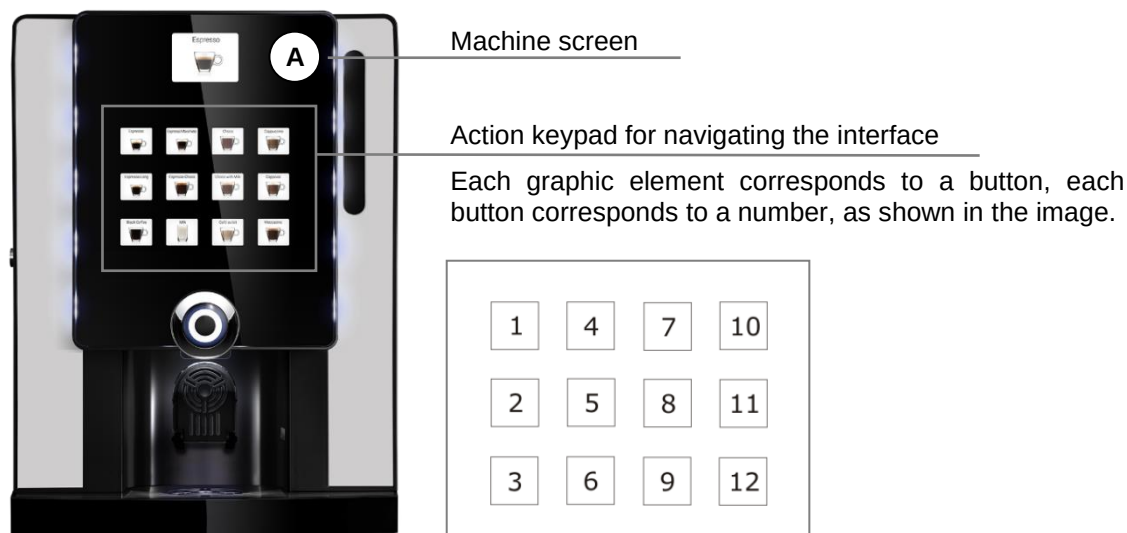

Navigate the menu

To navigate the menu, use the action keyboard, below, a list of common actions.

To...	Press button...
go to the next function	1
go to the previous function	6
go to the next parameter of the selected function	2
go to the previous parameter of the selected function	3
increase the parameter value	4
decrease the parameter value	5

12. Clean/rinse cycle

12.1. First rinsing

At the end of assembly and final inspection, the water used for testing is discharged from the machine; as soon as the machine is powered on for the first time, all circuits must be filled in before any other action; after all hydraulic circuits of the machine have been filled, the water flow stops automatically.



Transportation and installation conditions are such that the vending machine cannot be immediately used. It is necessary to carry out a complete clean cycle before using the vending machine, the machine will dispense a pre-fixed water quantity for each clean cycle.




Open the door, lift the cover, power on the main switch of the machine; **insert and rotate the service key into the door switch.**



Attention

The vending machine is supplied and operating to all effects; the mobile parts of the coffee brewer will be handled; act with extreme caution.

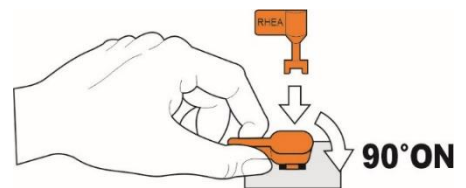

Press the programming button to access the setup mode

- to access the cleaning-rinsing menu, press button 4.

This procedure allows rinsing the components of the machine hydraulic system, such as the mixing bowls and the direct hot water circuit.

1-4= RINSE

press "1-4=RINSE" to gives access to the machine cleaning section. Enable the rinse cycle of the water circuit (heater, tubes, coffee brewer, mixing bowls), follow the instructions on the display; make sure that the drip tray is empty, If necessary empty the drip tray and then press button 10.

Connect the machine to the water supply, then press button 10: the cleaning/rinsing menu is displayed.



Prepare more cups as water is dispensed multiple times, place a cup beneath the nozzles; the machine will dispense a pre-fixed water quantity for each rinse cycle.

Do what follows:

To rinse...	Press button...
the first mixing bowl	1
the second mixing bowl	2
the third mixing bowl	3
the direct hot water circuit	4

When finished the cleaning-rinsing menu is displayed again.

Quick access to procedures:

start the rinsing procedure of the whole circuit by pressing 3 and 12 simultaneously.

Repeat the operation more times so as to rinse the whole water circuit of the machine completely; during the rinse cycles, the display will show the circuit that is being cleaned.



After the initial rinse cycle, power off the vending machine by means of the service key and also power off the main switch at the back of the machine.

12.2. Coffee brewer clean/rinse cycle (Espresso versions)



Attention

the vending machine is supplied and running to all effects, the mobile parts of the coffee brewer will be handled. act extremely carefully.



Cleaning-rinsing menu > 8=BC (button 8)

clean – rinse 1-4
5=MILK Mod. 8=BC

Procedure

Prepare more cups as water is dispensed multiple times.

1. Press **button 8** to perform the procedure manually or **button 10** to perform it automatically: some water is dispensed through the brewer nozzle. Then the brewer opens.



Note Performing the procedure automatically means that some steps are automatically confirmed.

2. Insert a cleaning tablet into the brewer, then press **button 10**: the brewer closes and the tablet starts to dissolve.



Note: It takes two 19-minute cycles for the tablet to be dissolved. The espresso pump opens about every twenty seconds.

3. When the tablet has dissolved, the first rinsing cycle of the brewer starts: the water flows through the brewer every ten seconds for three times.
4. Wait for the rinsing cycle to finish. Then press **button 10** to repeat the cycle or any other button to continue: the brewer opens.
5. Clean the filter with a brush.
6. To start the second rinsing cycle of the brewer, press **button 10**: the water flows through the brewer every ten seconds for six times.
7. Wait for the rinsing cycle to finish. Then press **button 10** to repeat the cycle or any other button to continue.
8. To make a coffee, press any button other than 1: a coffee starts to be delivered. Alternatively, to end the procedure, press **button 1**: some water is dispensed through each nozzle.
9. When finished, press **button 10**: the **CLEANING/RINSING** page is displayed.



If this cycle should be interrupted (sudden power failure, ...), the procedure will restart from the initial step of this clean cycle as soon as operation is restored.


After the clean/rinse cycle, power off the vending machine by means of the service key also power off the main switch at the back of the machine.

13. First installation procedure

Water circuit filling: use this procedure to fill the water circuit on next power on.



Open the door, lift the cover, power on the main switch of the machine; **insert and rotate the service key into the door switch.**

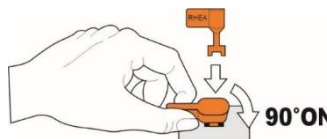

Enable water circuit filling

In the "Programming menu", press button 1 until you get to the "MISCELLANEOUS" function.

In **FIRST INSTALLAT.**, set the parameter to 0: the machine water circuit will automatically fill up the next time it is turned on.

Water filling cycle description:

Phase	Description
1	The machine is switched on.
2	Some checks are required. 1. Check the water level into the boiler and the water connection (open), then press button 10. 2. If necessary, empty the drip tray, then press button 10: the cycle starts.
3	Cold water is dispensed from the leftmost brewer nozzle.
4	When the cycle is finished, the FIRST INSTALLAT. parameter is automatically set to 1 to prevent the procedure from repeating at next power on.
5	The machine automatically restarts.

14. Vending machine loading

14.1. Loading instant products and coffee beans (when the machine is off).




To load instant products, it is recommended to extract each canister.

To load coffee beans, close the baffle before extracting the canister.

Lift the covers of each canister and pour the product according to the content of the machine configuration, make sure that there is no lump and avoid compressing the product.

Never fill any quantity in excess to avoid ageing, check the capacity of each canister on the basis of technical data.

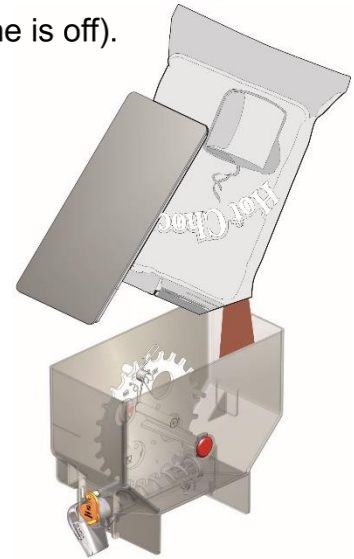

15. Programming

The vending machine is programmed with parameters considered standard for the specific configuration required.

The values forming the composition of recipes – written in the board memories – enable the user to dispense drinks without requiring the installer to programme special parameters; to modify these parameters for adaptation of the drinks you have produced, refer to the programming manual “**Software User Manual**”.



The vending machine is equipped with an automatic cleaning/rising system for the coffee brewer and an automatic rinsing system for the mixers and the relative water circuit.

If the vending machine is not used for some time (weekends, etc.) even for less than two days, it is recommended to enable the automatic cleaning and rinsing functions available in the software manual before using the vending machine.



Rheavendors Industries S.p.A. is ready to supply support and information on this vending machine;

telephone: +39 02 966551

e mail: rheavendors@rheavendors.com

for the references of our partners all over the world visit the site www.rheavendors.com.

16. Maintenance

The time interval of cleaning operations largely depends upon the number of dispensing cycles and the hardness of water in use (use a softening system) and it must be adjusted to the working conditions of the vending machine.



The actions described herein are intended to prevent bacterial growth in the machine areas directly in contact with foodstuffs and to keep the parts conveying drink-composing products clean; after having disassembled the parts of the machine listed here below, use plenty of lukewarm water to remove any residue that should build up.

The support of a bacteriostatic or bactericidal solution may strengthen a deep cleaning and rinsing action, provided it is compatible with human health and the supply of foodstuffs; reassemble all the parts you have cleaned after having dried them by means of a piece of clean cloth.

Before accessing the machine for each maintenance operation, it is recommended to inform the users by means of warning signs - properly positioned - that it is forbidden to use and approach the vending machine.



Attention: never wash the machine by means of water jets, wash your hands carefully with water and soap before handling the machine and its products, use drinkable water only, all components must be washed with lukewarm running water only (maximum 50 °C).

The mixers and the instant canisters can be washed in a dishwasher by setting a short wash cycle and a temperature below 50 °C.

Empty the grounds container daily and wash it thoroughly with lukewarm water. Also use the Service Book of the vending machine.

16.1. Weekly

Power off the machine, check the supply cable and carefully make sure that there is no signs of wear; check the stability and efficiency of internal connections of the mains supply carefully.

- **External structure and touchscreen**

Use a non-abrasive cloth, dampened with lukewarm water; use a neutral, non-foamy detergent, only if necessary.



Attention:

use neutral detergents only; never use abrasive cloths, steel brushes, aggressive or foamy detergents and other solvents, boiling water and acid; above all, never use alcoholic solutions.

Cleaning products shall be atomised on a cloth and not directly on the surface of the vending machine.

To clean the touch screen, it is recommended to use a mild detergent only, thinned according to the manufacturer's instructions, specific for these components (pc monitor and alike); pay attention not to scratch, not to leave any residual drop of the liquid detergent, not to spray the detergent directly onto the monitor; in any case, avoid dripping.

- **Drip tray**

Extract the drip tray, remove the upper grilled cover and wash with plenty of water; open the door and clean the drip tray housing inside the machine.

- **Product chutes**

Remove them from the product canisters, clean them with plenty of lukewarm water (product chutes are plugged in).

- **Product dispensing system**

Turn the levers intended to fasten the mixing bowls clockwise, remove the dispensing nozzles, pull the mixing bowls and the upper ring; remove the chutes and clean the assembly of disassembled parts with plenty of lukewarm water.

- **Machine walls and bottom**

Remove any trace of residue from the internal surfaces of the machine and clean with a damp cloth.

- **Internal door wall**

Remove any trace of residue from the internal surfaces of the door, above all in the proximity of the cup station.

16.2. Monthly

- **Environmental aspirator and powder aspirator**

Carefully make sure that the rotors of the two aspirators can freely rotate without any hindrance or stoppage; make sure that the corrugated tube for connection between the powder aspirator and the extraction drawer is clean and free of any product deposit.

- **Product canisters**

Rotate the closing baffles, remove the canisters from the machine, clean them outside, clean the support surface carefully to remove any trace of product.

- **Coffee beans canister**

Remove the coffee beans canister, make sure that coffee chute is free of any scale and that the millstones are intact and free of any residue.

- **Coffee brewer**

The whole coffee brewer can be cleaned and washed with running water since it has no component that may be damaged.



Remove the conveyor of the ground product simply by pulling it.



To extract the coffee brewer, release the carter by pressing on each side and pulling it to the outside.



Remove the coffee dispensing tube from the nozzles holder and then

remove the coffee brewer by pulling the orange release button and lifting it slightly.

16.3. Yearly

- **Dispensing system**

Replace the gasket at the bottom of the mixing bowl of the mixer; extract the mixer motor fan by pulling it and replace the gasket of the mixer motor shaft.

- **Product canisters**

Disassemble the product canisters on the machine; empty them, disassemble them in their basic components and clean them carefully.

- **Powder aspirator drawer**

Extract the powder aspirator drawer and the tube and clean them with plenty of lukewarm water.

- **Silicone hoses**

Make sure that the water conveying tubes are intact; replace them in case of need.

- **Air break**

Empty and clean the air break tank; carefully check the micro switch functionality operated by the floater rod and make sure that it can freely slide without any hindrance.

- **Coffee brewer**

Replace the three sealing rings of the compression chamber and the lower piston guide.

Replace the upper and lower filters.

Check the state of the compression chamber.



The frequency of these operations depends upon the number of dispensing cycles and the hardness of water in use.

Their regular and accurate execution prevents failures and malfunctions, it allows constant dispensing cycles and lengthens the life cycle of the machine.



The use of a softening filter, whose cartridge is regularly replaced, prevents the build-up of limestone.




The prescriptions reported in this manual must be integrated by the HACCP procedure of the company using the vending/coffee machine.

17. Uninstallation

Use this procedure to empty the water circuit of the Espresso vending machine (VM).



Open the door, lift the cover, power on the main switch of the machine; **insert and rotate the service key into the door switch.**

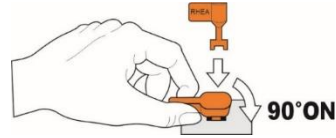

1= PROGRAMMING

MISCELLANEOUS

UNINSTALLATION
10= START

To perform the uninstallation:

press "1= PROGRAMMING"

scroll by means of key "2" to "MISCELLANEOUS"

press "1" and scroll by means of key "2" to "UNINSTALLATION"

press "10=START"

Check the water level in drip tray to avoid OFF error during the procedure or water leaking.

drip tray
empty? 10=START

remove coffee
grounds 10=START

As required by display messages, make sure that the drip tray and the grounds container are empty

Disconnect the water supply, insert a hose into the drain tap of the boiler and remove the plug from the outlet hose of the air break, then, put them close to a bucket (Boiler).

Press "10=START": the water circuit starts to empty; when finished, the boiler water temperature is set to zero and the value in **FIRST INSTALLATION** is automatically set to **YES** to make the machine water circuit fill up the next time it is turned on.

Remove the hose, close the boiler tap and reinsert the drain plug of the air break and switch off the machine.

18. Solution of Problems

Some events occurring during the operation of a machine, may partially or totally compromise its functionality; to help the user restore the normal functionality of the vending machine, the display shows an error code, summed up by an abbreviation, pointing at the compromised function or device.



while carrying out the operations necessary to restore the machine functions, act with the utmost care and strictly observe the safety rules for operators and users.

The following table shows an example of the errors that may appear during the functioning of the machine.

For the complete list of errors, refer to the software manual of the machine.

Off code	Context	Description	Solution
2	Connection error	• OFF 2E: Executive Connection error • OFF 2M: MDB Connection error • OFF 2P: Parallel Coin Connection error	Check the connection between the machine and the payment system. Otherwise, change the payment system configurations.
3	Waste water	The drip tray is full	Empty the drip tray and lay it back properly
5	EAROM	An error in the program memory has been detected • OFF 5: EAROM write operation error • OFF 5A: EAROM bank 1 write operation error • OFF 5B: EAROM bank 2 write operation error	Replace the CPU card
6	Water supply	• OFF 6A: Water refilling procedure did not end successfully. (INSTANT) • OFF 6B: Too many continuous water refills without selections.(INSTANT) • OFF 6C: Water refilling procedure did not end successfully • OFF 6D: Too many continuous water refills without selections	Check the connection between the machine and the water mains. Check for any water leaks
7	Espresso circuit	An error in the Brewer/Espresso unit has been detected • OFF 7A: Infusion too large. Possible failure of volumetric counter. • OFF 7C: Error in the brewer position during Infusion • OFF 7D: Infusion too large. Possible failure of volumetric counter. • OFF 7R: Volumetric counter (initial check)	Check the volumetric counter status
8	Coffee brewer	Brewer motor failure. It should move freely Along dispensing cycle • OFF 8 A/B/C/G/H/I/L/P/Q/R: Incorrect movement of the brewer during delivery phase • OFF 8 a/b/c/d/e/f/s: Incorrect movement of the brewer during initial check	Check the components of the gear engine: engine, pulleys, belt Check the encoder board, the CPU board and the wirings Check coffee grounds and hydraulic seals. Clear brewer

9	Coffee beans	The volumetric coffee doser is faulty • OFF 9: Shortage of coffee beans • OFF 9A: Shortage of coffee beans in left canister • OFF 9B: Shortage of coffee beans in right canister	Refill the canister(s) with coffee beans
14	Water inlet	• OFF 14A: Too many continuous selections without water refill	Check the water level detection system
16	Programming keyboard	A malfunction has been detected in the selection panel / switch / mechanism	Verify that the PROG button is functioning
17	Keyboard/ Sugar +/- keys	A malfunction has been detected in the selection panel / switch / mechanism. • OFF 17A: Keyboard	Verify that the selection is functioning
24	Power supply	A problem in the power supply unit has been detected. • OFF 24A/24B: One or more of the power supplies are indicating an under or over voltage situation.	Replace the power supply board of the machine.
31	Espresso coffee water	Temperature sensor is defective, disconnected or reading is out of range. • OFF 31A/B/C: Water temperature. A (high) B (low) C (sensor) • OFF 31H/V: Water temperature	Check the machine heating elements and connections.
32	Coffee brewer	Temperature sensor is defective, disconnected or reading is out of range. • OFF 32A/B/C: Brewer temperature. A (high) B (low) C (sensor)	Check the machine heating elements and connections.
41	Water Filter	Water filter is worn out.	Replace the water filter.
44	Products decounter	A canister is empty. No product can be dispensed.	Refill the canister(s).
54	Milker-CPU connection	Communication problem between the machine and the milker.	Check the connection between the machine and the milker.
121	Milker (Venturi model)	Water refilling procedure did not end successfully.	Check the water connection.
122	Milker (Venturi model)	Too many continuous selections without water refill.	Check the following elements: • pressure boiler water level probe • milker pump • water circuit of the machine • selections settings
123	Milker (Venturi model)	Water temperature • OFF 123A: Too high • OFF 123B: Too low • OFF 124C: Not detected. The probe is faulty or disconnected.	Check the milk temperature sensing probe.

19. Suspension of the service (temporary inactivity)

If the machine should remain off for more than one week, for any reason, it is necessary to:

- Empty the grinder completely by dispensing espresso coffee till an empty signal is sent out.
- Remove the product canisters from the vending machine and the product chutes from the canisters, clean them with plenty of lukewarm water (product chutes are plugged in).
- Turn the levers intended to fasten the mixing bowls clockwise, remove the dispensing nozzles, pull the mixing bowls and the upper ring; remove the chutes; clean the assembly of disassembled parts with plenty of lukewarm water.
- Remove any trace of residue from the internal surfaces of the machine and clean with a damp cloth.
- Remove any trace of residue from the internal surfaces of the door, above all in the proximity of the cup station.
- Empty the grounds container and the drip tray and clean and clean them with lukewarm running water.
- Empty the hydraulic circuit completely (see the uninstallation procedures).



Before setting the machine at work again, carry out the cleaning and sanitising operations described above.

20. Out of service

20.1. Temporary out of service

- In machine E, carry out the uninstallation cycle.
- In machine I, empty the boiler.
- In machine I, set the boiler water temperature to zero.
- Disconnect the water and power supply.
- Empty the drip tray.
- Remove the grounds container.
- Empty and clean the product canisters.
- Use a wet cloth to clean internal and external surfaces.
- Use a cloth to cover the machine
- Store it in a sheltered place at a temperature not below 5 °C, relative humidity not above 80%.

20.2. Definitive out of service



Should you put the vending machine out of service definitively and provide for the disposal of the components thereof, after carrying out the operations above, disassemble the vending machine by subdividing the parts according to the nature of the materials; the symbol applied means that the components of the vending machine shall not be treated as household waste, but delivered to the dump sites suitable for recycling electric and electronic equipment.



Refer to Directive 2012/19/EU and to the provisions thereof; the complete text of the Directive is available at the following address <https://eur-lex.europa.eu/homepage.html>

rheavendors group

Rhea Vendors Group S.p.A.
viale Trieste, 49 – 21042 Caronno Pertusella – Varese (VA) – Italy
Phone: +39-02-966551
E-mail: rheavendors@rheavendors.com